

# ERDÉ

Frene-Online.com  
7 rue Claude Monel  
27920 St Etienne sous Baillet  
Tel. 02.72.42.10.40 Fax. 02.72.42.03  
R.C.B. Créteil : 812 471 746

58409162-B

**KIT AMORTISSEURS HYDRAULIQUES POUR MODELE  
ERDE 153 A 234X4  
SHOCK ABSORBER KIT FOR ERDÉ TRAILERS  
MODELS 153 – 234x4**

**MONTAGE :**


Ce kit amortisseurs est prévu pour les modèles de remorque suivants: 153 essieu ALKO, 162, 163, 192, 193,213, 232, 233, et 234x4. Pour déterminer le montage adéquat, relever le modèle de votre essieu sur l'étiquette se trouvant sur le corps de celui-ci, et reportez-vous au schéma de montage suivant.

**FITTING INSTRUCTIONS :**

This shock absorber kit is designed to fit the following models: 153 with ALKO axle, 162, 163, 192, 193,213, 232, 233 and 234x4. To determine the adequate assembly, to raise the model of your axle on the label being on the body of this one and you defer to the following assembly diagram.


**Recommandations :**

- Avant de fixer l'amortisseur, enlever le bouchon plastique ou la vis HM 10x20 monté sur l'arrière de fusée,  
Destinés uniquement à la protection du filetage.  
Uniquement sur certains modèles.

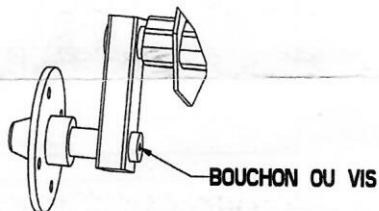

**Recommendation:**

- Before fitting the shock absorber, take off the plastic cap or the HM 10x20 bolt which has been fitted to the suspensions arm to protect the hole's bolt thread.  
Only on some models.

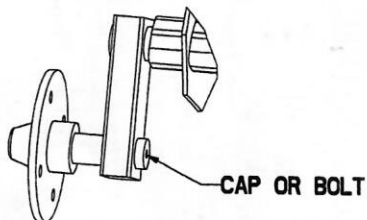

- Monter l'amortisseur comme indiqué ci-dessous (protection plastique vers le haut)

**SERRER ET BLOQUER TOUTES LES VIS**

**Frnc-Online.com**  
 7 rue Claude Monet  
 27020 St Etienne sous Baillet  
 0033 (0)272 43 10 48 Fax: 0272 42 03  
 P.C. & Contact : 06467 74670 744

- Fit the shock absorber as shown in the diagrams (plastic sleeve to the top)

**TIGHTEN NUTS AND BOLTS VERY FIRMLY**

